 


TR-151

Simple Tracker

Quick Start Guide

LED Indicator



A GSM LED

LED	Blink Quickly (Once per second)	Blink Slowly (Once every 3 seconds)
State	1.No SIM card inserted 2.TR-151 is searching GSM network 3.SIM card is registering to GSM network	Standby Mode

B GPS LED

LED	Keeps On	Blink Slowly (Once every 3 seconds)
State	1.TR-151 does not get GPS fix 2.TR-151 is trying to get GPS fix	TR-151 gets GPS fix

C Status LED


LED	Keeps On	Blink			
State	Battery low	1 time TR-151 is being turned off.	2 times TR-151 is being turned on.	3 times SOS button is pressed	5 times Error occurs

D Power LED

LED	Orange	Off
State	TR-151 is connected to charger or USB cable	LED goes off after the battery has been fully charged.

Device Operation

 
Charge the device

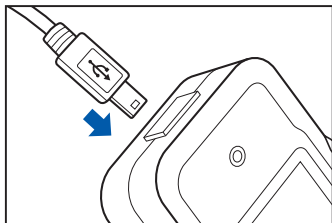


Before using TR-151 for the first time, please charge it by connecting to AC power adapter under the power-off condition at least 4 hours. You can also charge the TR-151 by connect it to PC or Notebook via USB cable. (The power of PC or of notebook should be turned on.)

Note: The attached battery is specially designed for TR-151. Please do not use other type of battery; otherwise it will damage the device. If you need to change the battery of TR-151, please contact your local dealer

 
Install SIM card

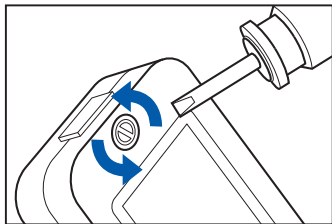

Unscrew TR-151 by screwdriver.

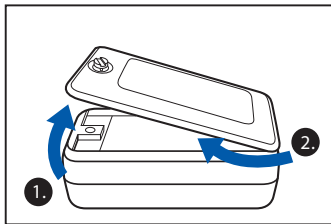 


Lift up the back cover.

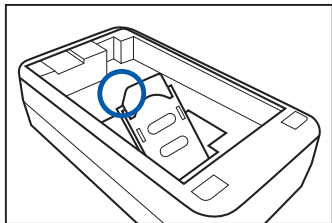 


-Push forward the cover of SIM card slot to the position marked with "OPEN". Then lift up the cover

 -Insert the SIM card with its metal contacts facing down and the cut corner at the top left.

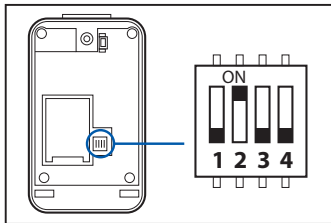


-Please make sure DIP switch 3 is at Off position.
-If DIP switch 3 is at On position, please turn it at Off position with the sharp-pointed stuff.

 Install Battery

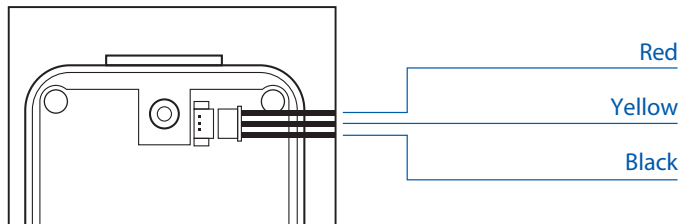

 Plug the battery connector into socket. Be aware that the red wire must be plugged on the top side.

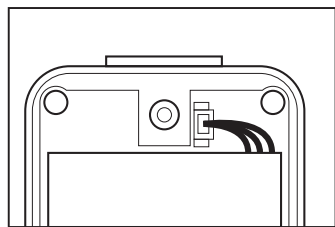

Please put the connector wire under the battery, and then put the battery into battery compartment.

NOTE:

After installing the battery, the status LED will emit red light. After the LED go out, please wait for 5 seconds before turning on the power.

 
Please take out the battery if you do not use TR-151 for a long time.

Turn on/off TR-151



- You could turn on the device by pressing and holding the power button until you see status LED [!] blink 2 times.
- You could turn off the device by pressing and holding the power button until you see status LED [!] blink 1 time.

Emergency button

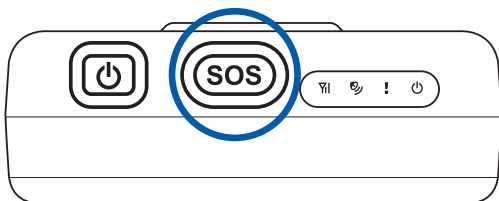

- You could press emergency button until you see status LED [!] blink 5 times. TR-151 will try to get GPS fix and then send out the emergency SMS to preset phone number.